

# NightSearcher Pulsar NavStar - Quick setup manual


Supplied with 10 x pulsars in case, AC charger and vehicle charger.

To view and download the full manual in multiple languages please go to <https://nightsearcher.co.uk/en/products-manuals.html>



Or scan this QR code.

For fast and easy deployment the case can be folded back on itself.

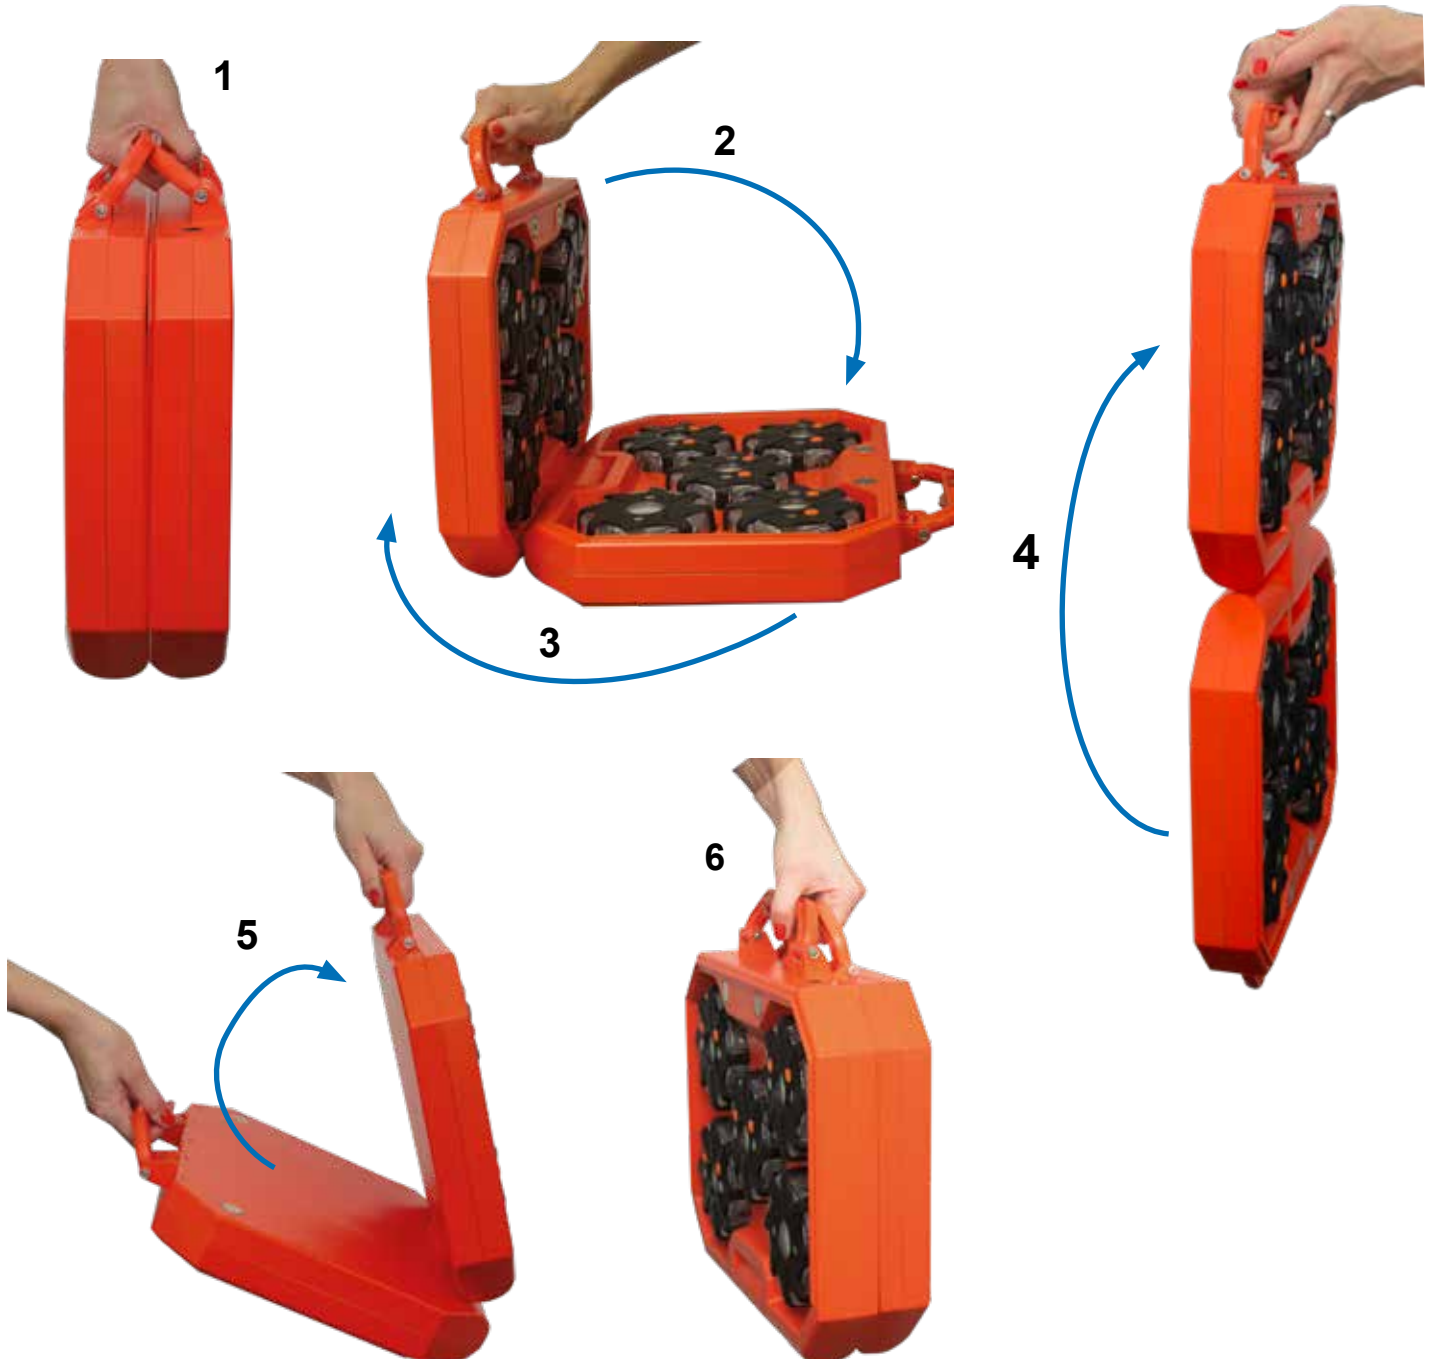

## Operating:

Round button to change light modes

Square button to change colour modes



- Remove pulsars from the charging case and place on the ground, an amber light will appear and the pulsar will start flashing. Lay the remaining pulsar on the ground and they will automatically synchronise with the flashing mode of the previous pulsar.
- The buttons on any of the pulsar can be pressed to change the colour modes and 6 flashing modes.
- Press the round button to change between the 6 flashing modes.
- Press the square button to change between the colour modes - blue/amber/red.
- When you have the pulsars set up to the chosen flashing and colour mode, place all Pulsars back into the pockets in the carry case, ensuring the magnet is face down and the cluster of 4 LEDs is face up. The Pulsar are held inside of the pocket by the magnet. Now they are ready to be charged.

**Note: The pulsar lights will not turn off until they are replaced back into the case.**

## Charging - 10-12 hours charging time:

Connect the charger lead into the socket and connect the charger into a power supply (AC or DC), depending on the charger being used.



### Charging Indicator:

Red light = charging in process | Green light = fully charged

Once you have finished using the pulsar's fold the case back on itself so the pulsars are held in the case securely.

**Warning: Never use the charger if the leads, contacts or casings are damaged. Do not use any chargers other than those provided.**

## How to reset pulsars:


- Removing all pulsars from the carry case
- Switching them all OFF, pushing and holding the round button
- Once they are all switched off, on ONE pulsar only push and hold the square button for approximately 30 seconds, a red and amber LED will flash inside the unit
- For each other pulsar now push and hold the square button for approximately 30 seconds (one unit at a time) the red and amber LED's will flash for a short time and go off, repeat this for the entire set. (the original pulsar will continue to flash during the process)
- Once all units have been reprogrammed, press the square button on the original (first pulsar). The red amber LEDs will now go off, release the button and set pulsar to one side
- Replace pulsars into carrying case, they should now operate correctly



**NightSearcher Limited**  
Unit 4 Applied House, Fitzherbert Spur, Farlington,  
Portsmouth, Hampshire, PO6 1TT, UK  
T: +44 (0)23 9238 9774  
E: [sales@nightsearcher.co.uk](mailto:sales@nightsearcher.co.uk)

All NightSearcher products have a 3-year standard warranty on all manufacturing defects and 1-year warranty on all rechargeable batteries from the date of purchase.

For extended 5 year warranty please visit <https://nightsearcher.co.uk/en/extended-warranty.html> proof of purchase is required

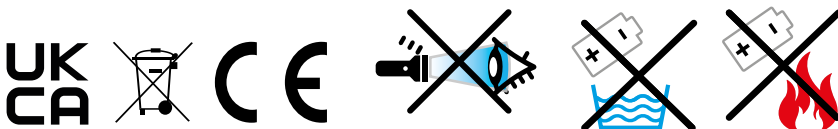

Product weight	5kg
Product size	370x150x335mm
NS Part No.	NSPULSARNAVSTAR

2106822.6 Patent Pending