

Eagle Nest **3**

part no. 21-0150-007


Features

Eagle Nest 3, wholly manufactured in titanium, is included in the category of mobile anchorages and is certified in accordance with EN 795 regulation.

The high resistance of this device, together with its low weight, provide extreme reliability combined with ease of assembly (can be fully assembled and disassembled by a single operator).

The wide basic opening ensures high stability and a large working area.

fast assembly
— thanks to 12 pins

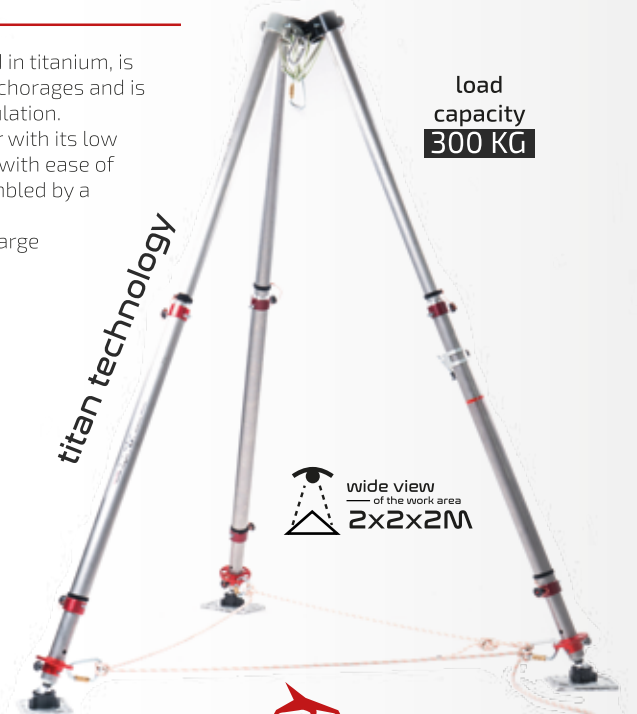

load capacity
300 KG

wide view
of the work area
2x2x2M

Support foot
for any surface



3 FEET
with ball joint
SUITABLE FOR EVERY SURFACE

- snow pickets
- ice screws
- rock expansion bolts

maximum height
— **2702mm**

adjustment in
— **5 positions**

material
— **Titanium**

Lega **Ti-3Al-2,5V** alloy,
excellent impact resistance, great flexibility, exceptional resistance to acids and salt corrosion.

This alloy is as resistant as steel but 56% lighter.

Certified for lifting of
3 persons

Certifications:
EN795
CEN/TS 16415 : 2013



Backpackable and divisible.

storage transport in bag/backpack

— **140x40x20 cm**

Material: **cordura 500**
Abrasion-resistant



FERNO

CONCEPT
LIGHTWEIGHT, RESISTANT, TRANSPORTABLE, EASY.
These are the key words describing Eagle Nest design, capable of transforming these simple adjectives into real strengths.

overall weight
22 Kg

load capacity
3 KN 300Kg

certification according to
EN 795 standard

FERNO[®]

Accessories



3-toed foot adaptable
to floor unevenness

Code 25-1900-002



FERNO[®]

Sede Legale e Uffici Commerciali
Via B. Zallone n. 26
40066 Pieve di Cento [Bo] | Italy
P +39 051 6860028 | F +39 051 6861508
info@ferno.it
www.ferno.it

Numero Verde
800 501711

FERNO[®]
Schweiz

FERNO (Schweiz) AG - Cheerstrasse 16,
6014 Littau/Luzern - Switzerland
P +41 41 259 60 00
F +41 41 259 60 01
MWST-Nr.: CHE-100.510.974
www.ferno-schweiz.ch

Eagle 
Nest 3



FERNO[®]